

CP-49E Process-Box

1. Description :

CP-49E Process-Box contains 2 replacement cartridges for Fuji Frontier® minilabs (Frontier® 340, 500, 550, 570, 590);
 easy-to-use drop-in replacement for Fuji CP-49E cartridge;
 contains single part developer and bleach-fix part A and B;
 capacity of one cartridge: 111 m² paper

2. Technical data :

	Developer P1	Bleach-fix P2
<u>Frontier® 340</u>		
Processing time:	25 s	25 s
Temperature:	45 ± 0,3 °C	40 ± 2,0 °C
Replenishment rate:	45 ml / m ²	35 ml / m ²
<u>Frontier® 500, 550, 570, 590</u>		
Processing time:	19 s	19 s
Temperature:	43 ± 0,3 °C	43 ± 2,0 °C
Replenishment rate:	45 ml / m ²	35 ml / m ²

3. Assortment

Ref.-No.	Product name	Contents	Capacity (m ²)
16728	CP-49E Process-Box	2	2 x 111

CP-49E Process-Box

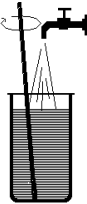
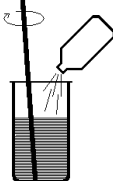
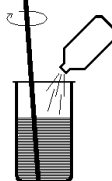
4. Mixing of tank solution

The following products are required for mixing of tank solutions.

	Ref.-No.	Product-name	Units needed
Developer	16620	SPC RA-4 CD-FP for 8 x 5 l	1
Starter	16020	RA-4 CD-S 1 l Conc.	1
Bleach-fix	16562	SPC RA-4 BX-VR for 8 x 5 l	1

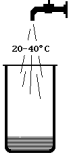
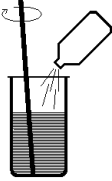
Preparation of fresh tank solution:

Developer P1

Water	Concentrate	Starter conc. RA-4 CD-S
		
FRONTIER® TYPE		
340: 6,05 l 550/570: 10,8 l	700 ml 1,1 l	350 ml = 7,1 l 380 ml = 11,0 l

CP-49E Process-Box

Bleach-fix P2

Water (20-40 °C)	Concentrate	
		
800 ml	200 ml	= 1000 ml
FRONTIER® TYPE		
340:	5,84 l	1,46 l = 7,3 l
550/570:	8,8 l	2,2 l = 11,0 l